

Installation instructions for Rear Set Triumph Street Triple 765 year 2017 - Part nr. 547



We would like to thank you for purchasing PP Tuning rear set. Please take a moment to read the assembly instructions. Following these instructions will ensure trouble free operation of this product and extend its working life.


Left side installation

Remove the original rear set and follow instructions according to pictures 1. and 2. The correct inclination of the brake lever is achieved by turning shift rod, which is marked with red arrow in picture 2.



Right side installation

Pictures No. 3 - 5 show the correct way to install the right side. Use the rubber, which is a part of the package of OEM rear set to exhaust support (marked with red arrow in picture 4). Insert a washer $\text{\O} 31,6 \times 10\text{mm}$ (part of the package) between the exhaust and the holder (marked with red arrow in picture 5).

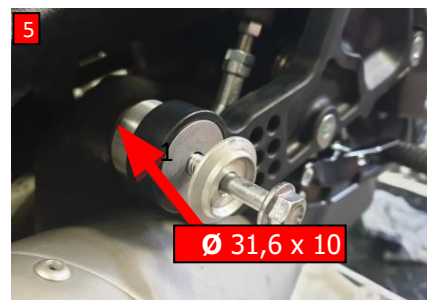

And the last important information: Enjoy this product and drive carefully!

PP Tuning Team