

**Installation instructions for
Rear Set Kawasaki Z900, from year 2017
Part nr. 649F**




Left side installation

Remove the original rear set and mount the PP rear set as shown in picture No.1. Location of rear set is the same to the original rear set.




Right side installation

At right side is necessary exchange ABS brake hose (is part of the packaging). Follow the pictures nr. 2

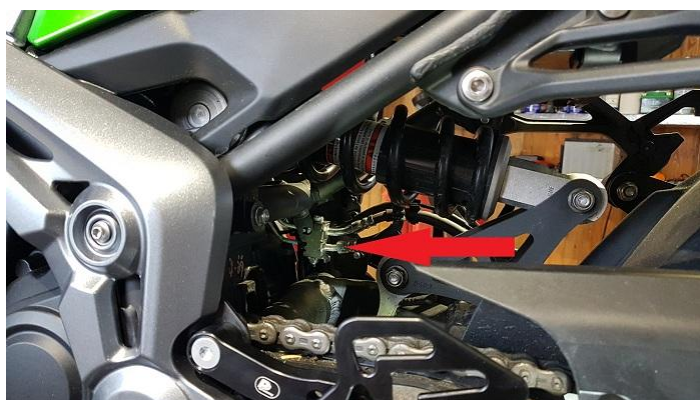

The brake fluid holder has to be mount according to picture nr. 3. Don't forget put under the lower screw M8 washer (see arrow on the picture nr.4). Without this washer the brake master cylinder will be crookedly mounted!

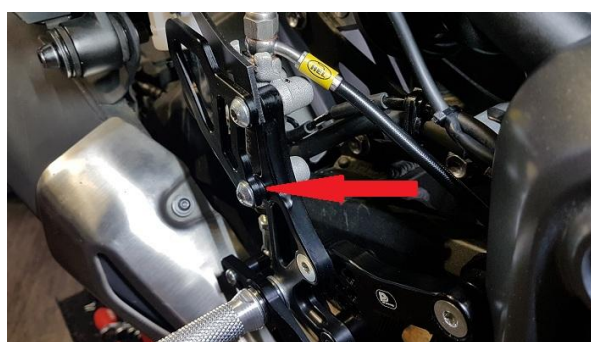

After replacing the brake hose is necessary fit also brake sensor for rear brake light. (picture nr.5)

