


Installation instructions for Rear Set Honda CBR1000RR with reverse shifting, year 2020 - Part nr. 7380



We would like to thank you for purchasing PP Tuning rear set. Please take a moment to read the assembly instructions. Following these instructions will ensure trouble free operation of this product and extend its working life.


Left side installation

Remove the original rear set and side stand. Then screw on shift lever holder, that is a part of package. For assembly use original screws from side stand (marked with red arrows number 1). At the end screw on the shift lever and connect it with shift rod. To connect it use OEM Joints for shift rod, which are on original rear set.

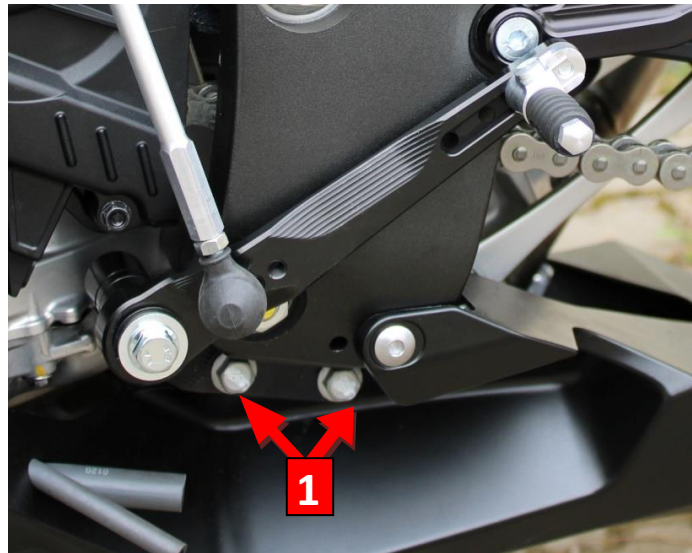

Right side installation

Remove the original rear set on right side – picture number 2. If you want to keep functionality of rear brake light follow instructions on picture number 3. Insert the sensor of brake light to holder which is marked with red arrow in picture number 3 and adjust it as needed.

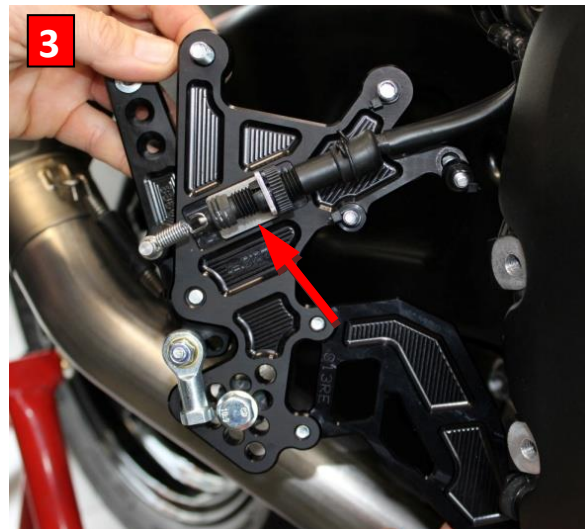

And the last important information: Enjoy this product and drive carefully!

PP Tuning Team