





Installation instructions for Rear Set Yamaha R1, year 2007-2008 OEM shifting, part nr. 682 Reverse shifting, part nr. 6820



We would like to thank you for purchasing PP Tuning rear set. Please take a moment to read the assembly instructions. Following these instructions will ensure trouble free operation of this product and extend its working life.




Left side installation

Remove the original rear set. Remove nut M10 on the right side of motorcycle (pic. 1) and pull out the whole screw. Slide this screw back from the other side according to pic. 2. This creates a thread on the left side of the motorcycle (pic. 3). Screw on spacer for shift lever (pic. 4) and shift lever (OEM shifting is on the picture 5 and reverse shifting on the picture 6).

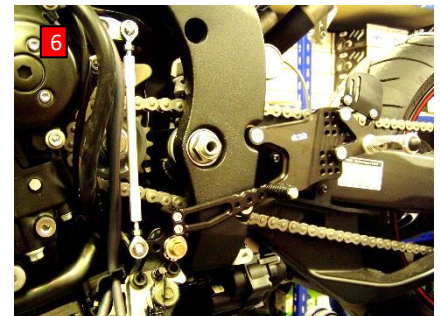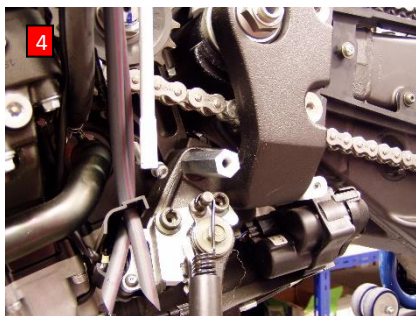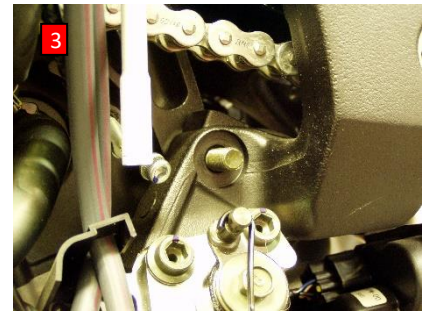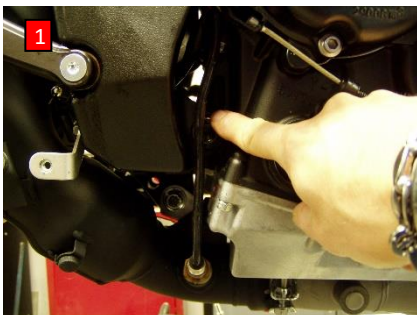

Right side installation

Remove right side of OEM rear set and follow instructions on the picture 7, 8 and 9. Use original screw M5 for assembly of caps for fluid tank. When the PP rear set will be mounted the original brake hose will be too long and therefore, we recommend to change this hose for the one which is part of the package.

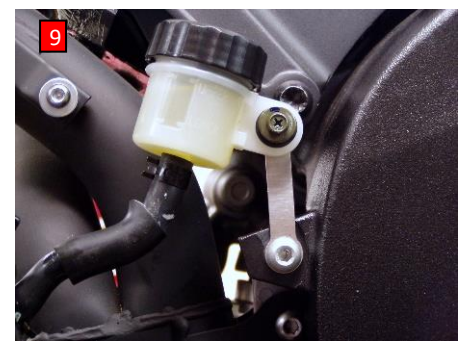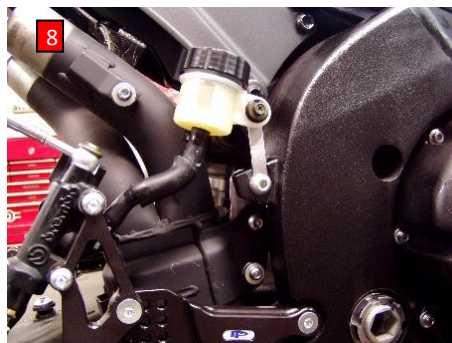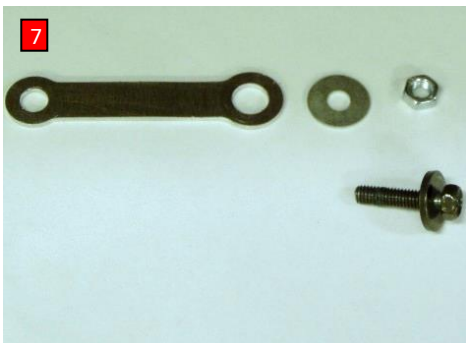

And the last important information: Enjoy this product and drive carefully!

PP Tuning Team