


# Clip-on handlebars model „SPORT“ diameter 35 mm – 58 mm

Between the sleeve and a great washer M8 MUST NOT be space. See red arrow.

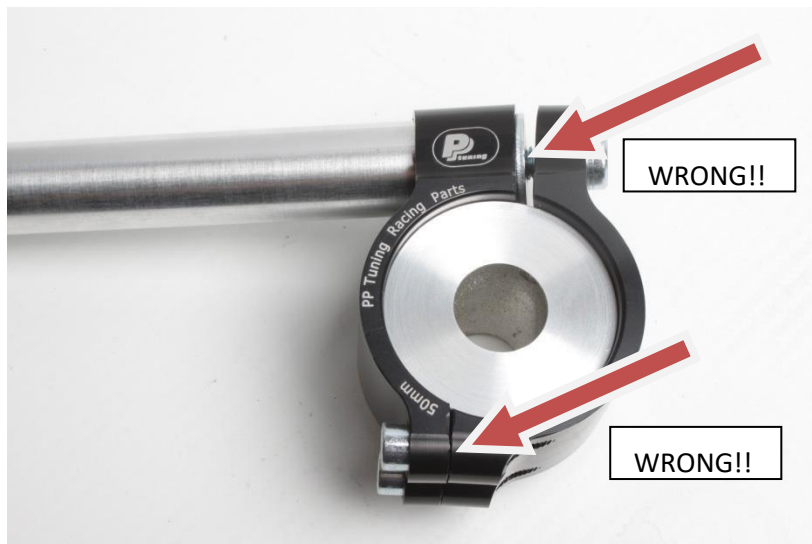

When mounting - first tighten (not use excessive force) screw M8. Washer cannot be loose. There must not be gap. On picture nr.1 there is. It is bad procedure. Then tighten lightly 2 screws M6. Then tighten screw **M8 to serrage**  $C = 2,5 \text{ KGM} = 25\text{Nm}$  and as last tighten again 2 screws **M6 to serrage**  $C = 1,8 \text{ KGM} = 18\text{Nm}$ . Any higher serrage value might result in breaking the screws or deforming the front suspension tree in case of an upside-down model. Any lower serrage value might result in a lack of stability during those driving situations in which the Clip-On Handlebars are under pressure.

