



# Footrest kit "FACTORY"

Yamaha YZF 1000, R1, from year 2004 →  
With revers (cod.680.0F) or original (cod.680F) shifting



Thank you for purchasing the PP rear set. Please pay attention to several assembling advices, those will prolong the product life and will guarantee the correct working of it.


The essential difference of our set is that the shift rod is led outside the frame.

By assembling the footrest kit – dismount the stock shift lever and see fotos 1 – 7 as following.

Pictures 1 - 5 apply to original + reverse shifting


Pictures 6 applies to original shifting

Pictures 7 applies to reverse shifting

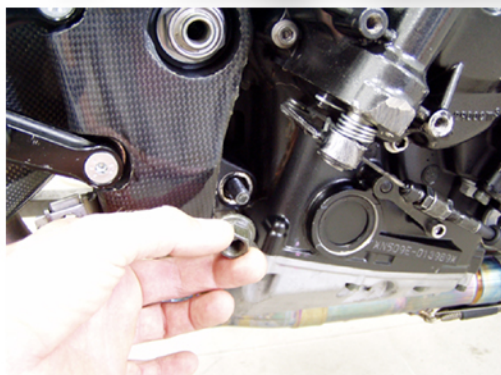


1

Loose the nut and pull out the bolt on the left side of the bike.

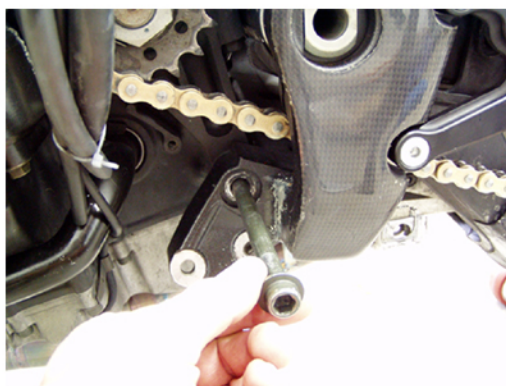

2

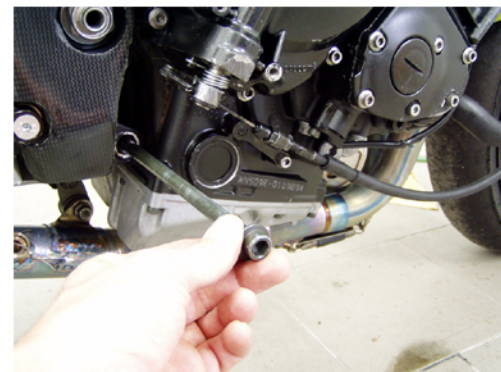


3

Put in the same bolt from the right side of the bike and be assured it goes through to the left side.




4

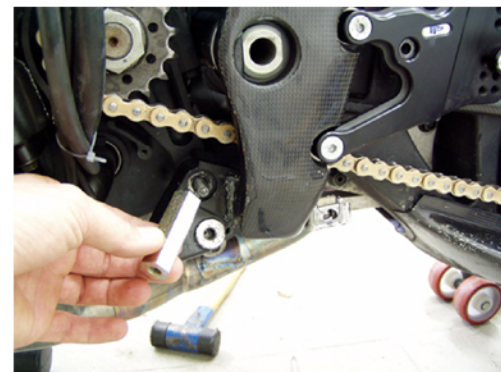

5

Put the spacer supplied in PP Tuning kit on the thread which is sticking out and tighten up.

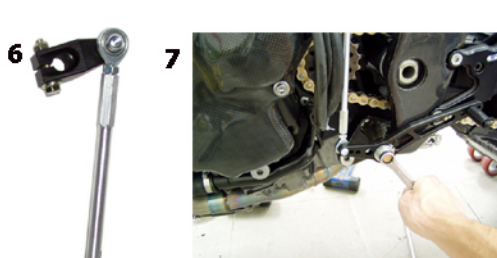

6

7

Reverse shifting



Original shifting