






Installation instructions for Rear Set Honda CBR 600RR (2007-2023) Part Nr. 737

We would like to thank you for purchasing PP Tuning rear sets. Please take a moment to read the assembly instructions. Following these instructions will ensure trouble free operation of this product and extend its working life.

Left side installation

Remove the original (OEM) rearset. The shift lever is mounted instead the left screw on the side stand (marked with an arrow in pic. 1). Screw a spacer into the place Nr. 82551 (marked with an arrow in pic. 2). On this spacer mounted the shift lever (pic. 2–5).

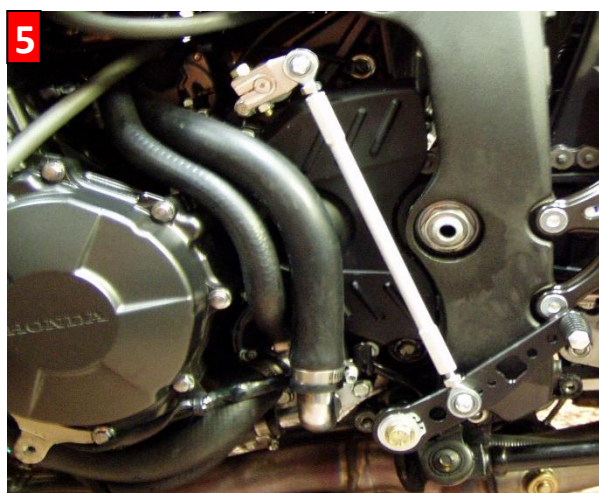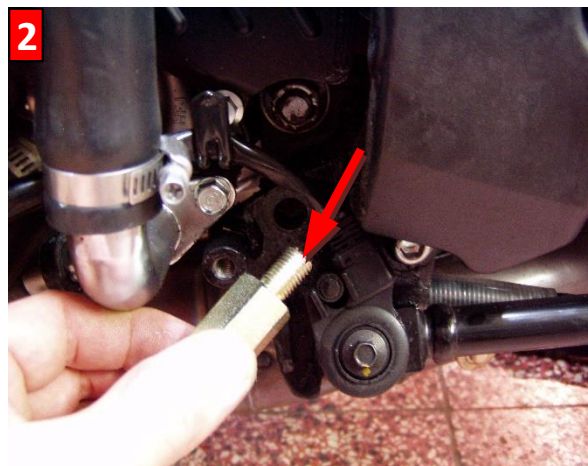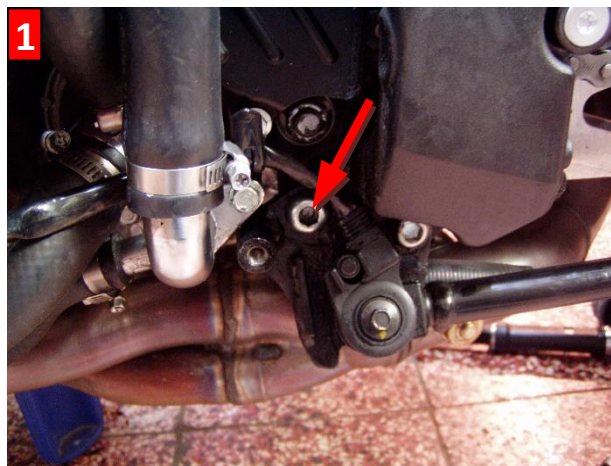

Right side installation

The right side is mounted in the same way as the original (OEM) rearset.

If you want to keep function of the brake light sensor, we recommend to buy a brake sensor (part Nr. BC125).

PP Tuning Racing Parts, Jezeřany-Maršovice 328, 671 75 Loděnice, Czech Republic

www.pptuning.eu

Thank you for purchasing our product. We wish you many happy miles without accidents.