



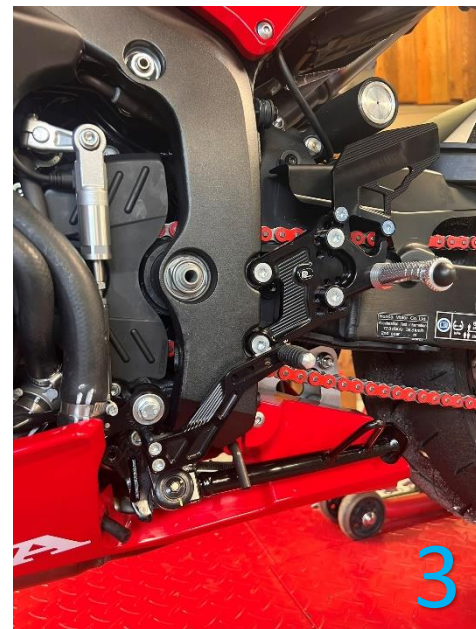

## Installation instructions for Rear Set Honda CBR 600RR (2024-) with reverse shifting Part Nr. 73701

### Left side installation

Remove the original (OEM) rearset and remove the nut M12 (marked with an arrow in pic. 1). Screw a spacer into the place and this spacer put together with the shift lever (pic. 2 + 3).

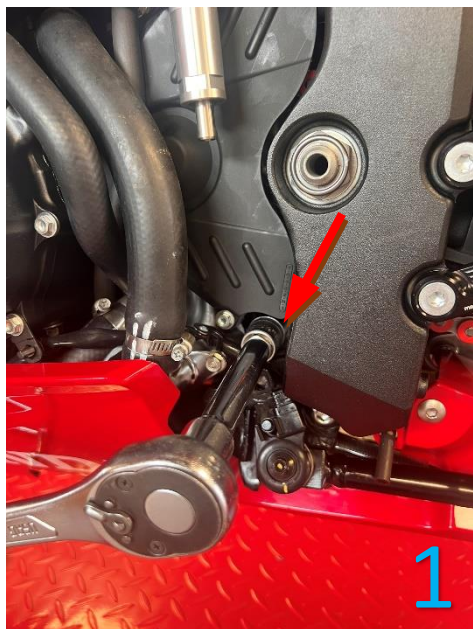

For correctly adjust shifting is necessary the original (OEM) spacer/cogwheel turned down by 2 cogs/teeth. The dot stamped on the shift axis must be here as shown in pic. 4. Further adjustment is achieved by the rod shift.

If you want to significantly shorten the shifting, we recommend to buy a spacer (part Nr. 829).

### Right side installation

The right side is mounted in the same way as the original (OEM) rearset.

PP Tuning Racing Parts, Jezeřany-Maršovice 328, 671 75 Loděnice, Czech Republic  
[www.pptuning.eu](http://www.pptuning.eu)

Thank you for purchasing our product. We wish you many happy miles without accidents.