




## Installation instructions for Rear Set Honda CBR 600RR (2024-) with reverse shifting Part Nr. 73701

### Left side installation

Remove the original (OEM) rearset and remove the nut M12 (marked with an arrow in pic. 1). Screw a spacer into the place and this spacer put together with the shift lever (pic. 2 + 3).

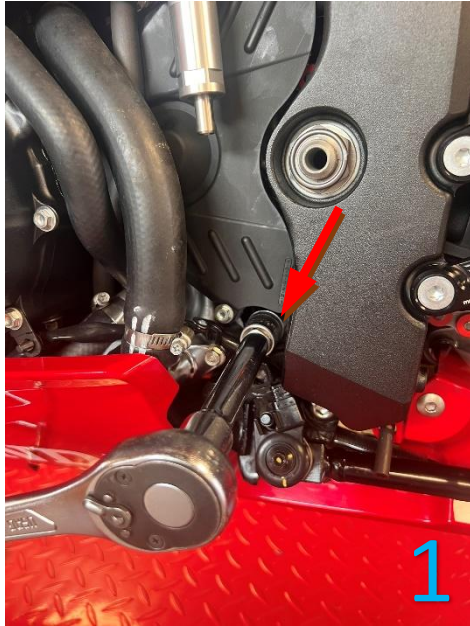

### Right side installation

The right side is mounted in the same way as the original (OEM) rearset.

PP Tuning Racing Parts, Jezeřany-Maršovice 328, 671 75 Loděnice, Czech Republic  
[www.pptuning.eu](http://www.pptuning.eu)

Thank you for purchasing our product. We wish you many happy miles without accidents.