

**Installation instructions for Rear Set  
SUZUKI GSXR1000, r.v. 2017 -  
Part nr. 699**



Thank you for purchasing the PPTuning footrest set. Please take a moment to read the installation instructions. Following these instructions will ensure trouble-free operation of this product and extend its service life.

**IMPORTANT – THE FOOTREST IS ONLY ASSEMBLED, THE SCREWS ARE NOT TIGHTENED TO TORQUE AND NO THREAD LOCKER IS USED ON THEM**

Tighten the M6 screws to a torque of 18 Nm.


Tighten the M8 screws to a torque of 25 Nm.

For safety reasons, use Loctite 241 threadlocker or an equivalent substitute when installing all screws.


**LEFT SIDE - Installation**

Remove the OEM footrest set, including the original shift linkage.


Install the shift rod part as shown in picture n.1

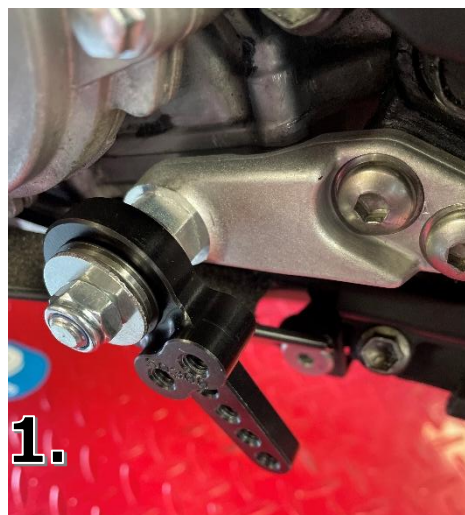


Install the shift rod as shown in picture n.2

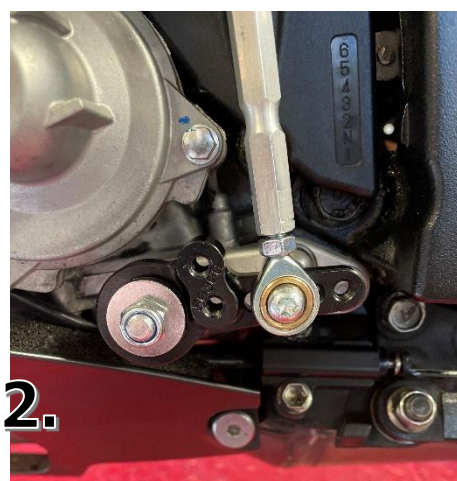

Install the gear lever as in picture n.3

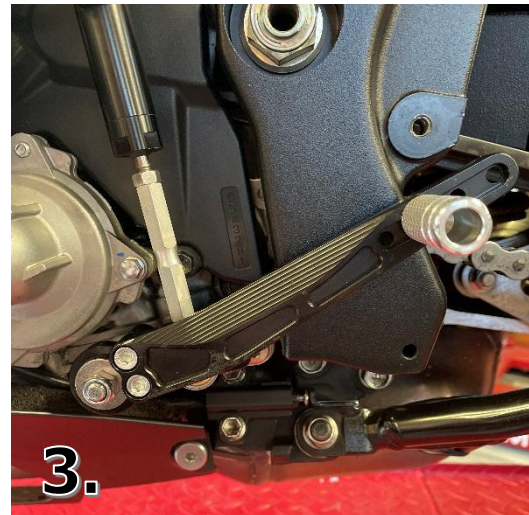

Install the arm, including the footrest and protector. Adjust the lever to the correct height using the pull rod and tighten the nuts on both sides of the pull rod. As in picture n.4

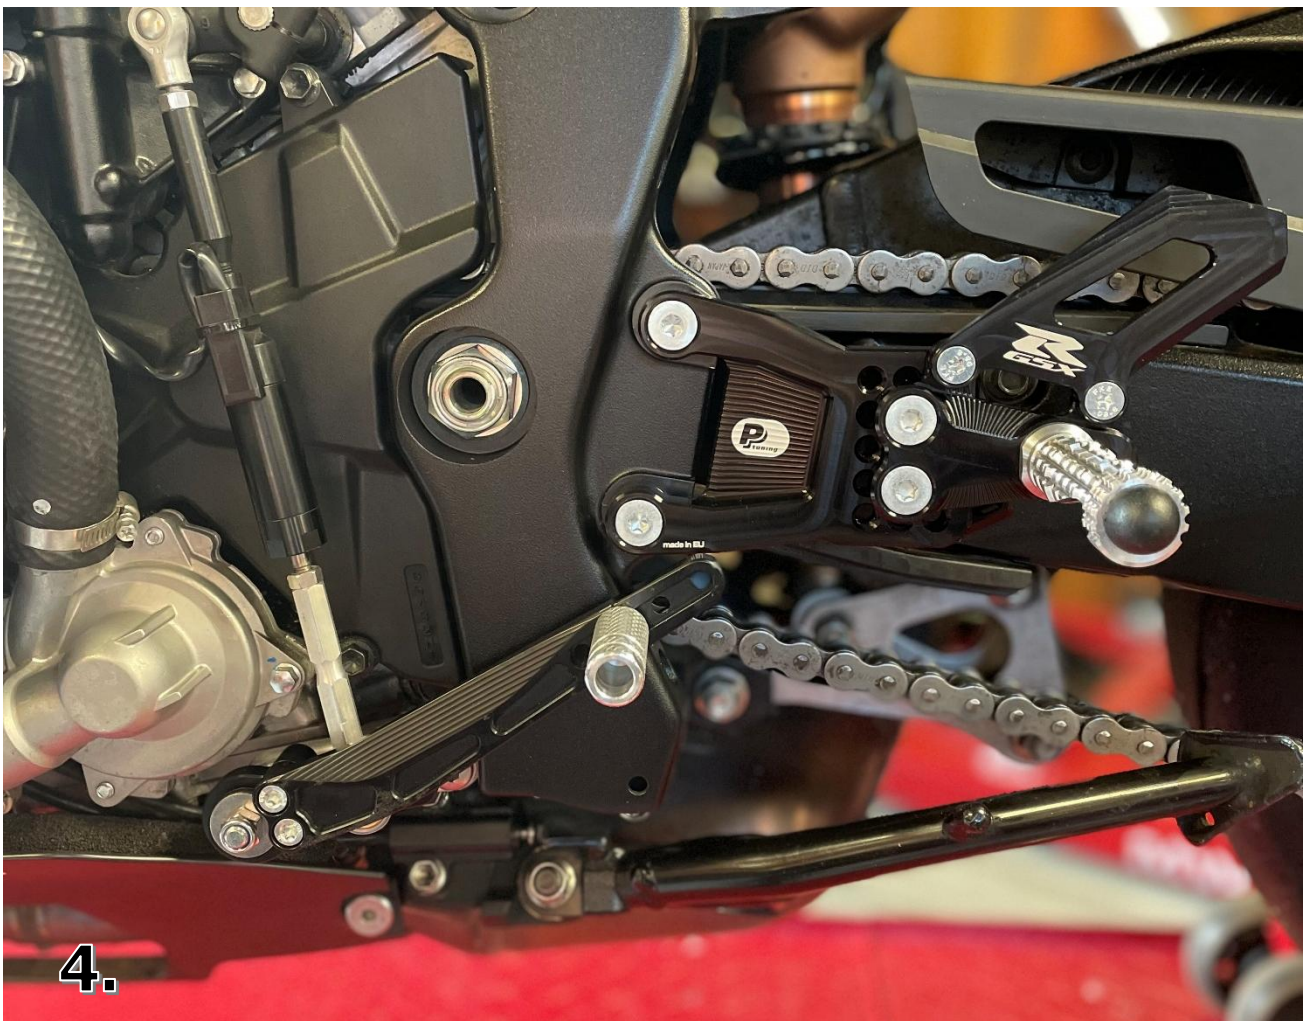


## RIGHT SIDE - Installation

Remove the OEM footboard set according to picture n.5



Screw the joint onto the OEM brake cylinder and tighten with the OEM M8 nut. Assemble the arm + brake lever + guard. Screw the brake lever to the joint, as in picture n.6 and 7 (the washer is between the joint and the lever).

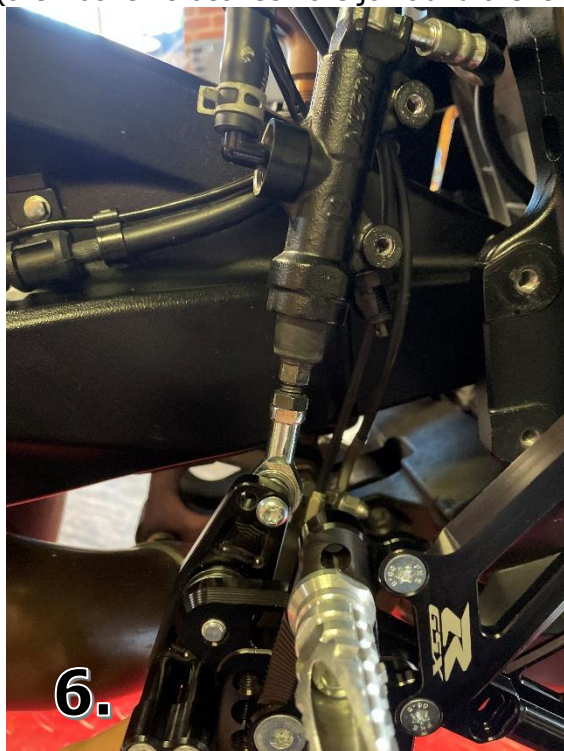


Screw the arm with washers to the frame as shown in picture n.8



Screw the brake cylinder on using the washers provided.

**Before tightening the screws, turn the brake cylinder so that it is perpendicular to the lever.**

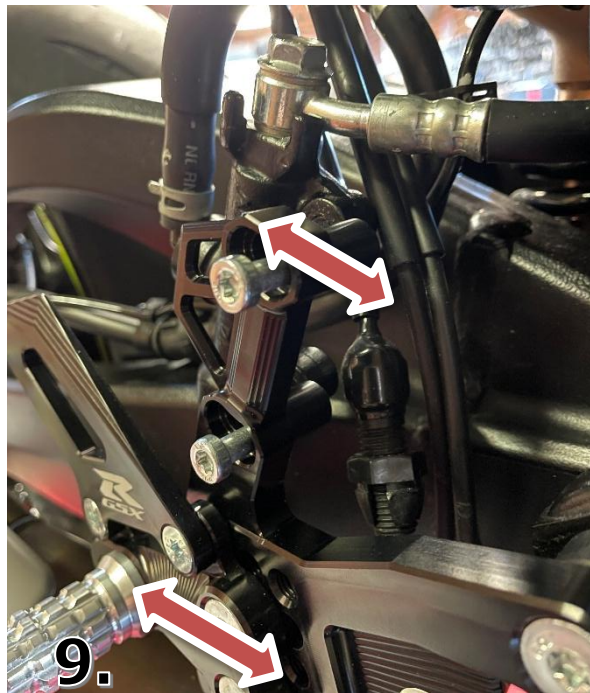

**AFTER COMPLETE INSTALLATION, WE RECOMMEND CHECKING ALL SCREWS AGAIN TO ENSURE THEY ARE TIGHTENED.**

PP Tuning Team

PP Tuning Racing Parts, Jezeřany – Maršovice 328, 671 75 Loděnice, Czech Republic  
+420 604 458 216, [pptuning@pptuning.eu](mailto:pptuning@pptuning.eu), [www.pptuning.eu](http://www.pptuning.eu)