Field Probe Positioner

FPP-16

The Field Probe Positioner (FPP-16) is designed for remote-controlled, X-Y positioning in defined vertical areas. The system allows for automatic measurements of the field uniformity as per IEC 61000-4-3;. It automates the positioning of the field probe over the $1.5 \,\mathrm{m} \times 1.5 \,\mathrm{m}$, 16-point grid, for both horizontal and vertical polarizations, to greatly reduce the time and hassle of the field uniformity measurements.

The mechanical design, with built-in limit switches, ensures safe and reliable operation. The FPP-16, with the exception of the drive unit, is fabricated from plastic (PVC and reinforced fibreglass). Metal parts are located only in the base plate and the drive mechanism (max 0.3 m above ground level). This allows for accurate measurements with negligible electromagnetic interference from the FPP-16 positioner. The IEEE 488.2 (GPIB) bus provides an additional control option for all functions, when operated with the MCU or NCD Controller.



Product highlights

- Fully automated: Remote control via IEEE 488 Interface
- Constructed out of PVC and reinforced fiberglass
- Belt driven technology: Non-metallic, Kevlar-reinforced, toothed belts
- Fiber optic control
- Brushless DC motors

Accessories

- Interface to MCU/NCD controller
- 1.5 m power supply cable
- 5 m and 10 m fiber optic cable
- Service manual

Specifications

PARAMETER	UNITS	POSITIONER MODEL
		FPP-16

PHYSICAL

Field Probe Height Adjustment	m	0.8 - 2.3
Overall Height	m	2.7
Overall Lenght	m	2.3
Horizontal Range	m	1.5
Total Weight (approx)	kg	40

OPERATIONAL


Load Capability	kg	3
Cross-section Carrier Tubes	mm	60 x 60
Rail Width	mm	650
Positioning Speed (adjustable)	cm/s	2.0 - 12.0
Positioning Accuracy	cm	±1
Interference Suppression ⁽¹⁾	db	20
Current Consuption (max)	Α	2
Voltage		208-230 VAC, 50/60 Hz, single phase
Discharge Current ⁽²⁾		25 mA per drive unit

ENVIRONMENTAL

Operating Temperature	+10° C to +35° C



⁽¹⁾ Under limits EN 55022 class B(2) Higher in the moment when powering on

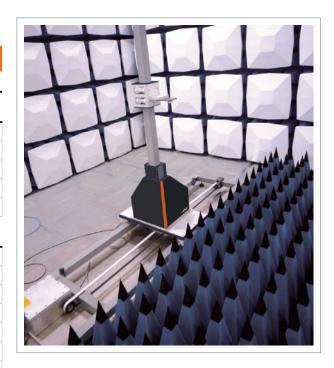



• Refer to FPP-16 positioner

